



DESCRIPTION	YEAR	PART NUMBER	QTY	REF# / NOTES
<b>KITS</b>				
MASTER KIT W/FRICTION & STEEL	1958-1965	F102L-1	1	NI
MAJOR KIT W/FRICTIONS	1958-1965	F102L-2	1	NI
OVERHAUL KIT	1958-1965	F102L-3	1	NI
EXTERNAL SEAL KIT	1958-1965	F102L-4	1	NI
<b>GASKETS</b>				
PAN GASKET	1958-1960	2263M	1	A3
PAN GASKET	1961-1965	2356M	1	A3
EXTENSION HOUSING GASKET	1958-1960	2255M	1	F4
EXTENSION HOUSING GASKET	1961-1965	2355M	1	F4
<b>FILTER</b>				
TRANSMISSION FILTER	1958-1960	F817B	1	A14
TRANSMISSION FILTER - DACRON	1961-1965	803M	1	A14
TRANSMISSION FILTER – METAL	1961-1965	803ME	1	A14
<b>O-RINGS</b>				
THROTTLE LEVER O-RING	1958-1965	4617F	1	A16
<b>SEALS</b>				
FRONT PUMP SEAL	1958-1965	3186F	1	A9
EXTENSION HOUSING SEAL	1958-1960	3105H	1	F7
EXTENSION HOUSING SEAL	1961-1965	3149M	1	F7
MANUAL LEVER SEAL	1958-1965	3150F	1	A15
<b>BANDS</b>				
FRONT BAND	1958-1960	F122J	1	D10
FRONT BAND	1961-1965	F122L	1	D10
REAR BAND	1958-1960	F122H	1	E8
REAR BAND	1961-1965	F122K	1	E8
<b>FRICTIONS</b>				
FRONT & REAR FRICTION PLATE – BRONZE	1958-1965	F9-1	AR	C6/D3
FRONT & REAR FRICTION PLATE - FIBER	1958-1965	F9-1A	9	C6/D3
<b>STEELS</b>				
FRONT & REAR STEEL PLATE	1958-1965	F11-1	9	C5/D2
<b>BUSHINGS</b>				
BUSHING KIT	1958-1965	KF106B	1	NI
PUMP BUSHING	1958-1965	5063F	1	A8

EXTENSION HOUSING BUSHING	1958-1960	5307Q	1	F6
EXTENSION HOUSING BUSHING	1961-1965	5218M	1	F6
<b>WASHERS</b>				
THRUST WASHER KIT	1958-1965	KF111B	1	NI
<b>SEALING RINGS</b>				
SEALING RING KIT	1958-1965	F104C	1	NI
<b>MODULATOR</b>				
VACUUM MODULATOR	1961-1965	MT-66	1	A19
<b>NEW HARD PARTS</b>				
ELEMENT SPRAG	1959-1965	8101M	1	NI
FRONT CLUTCH RETURN SPRING	1958-1965	8649F	1	C8
GOVERNOR ANTI STICK SPRING	1958-1965	G60	1	NI
<b>REBUILT/USED HARD PARTS</b>				
FRONT PUMP ASSEMBLY	1958-1960	F01B	1	A10
FRONT PUMP ASSEMBLY	1961-1965	F01C	1	A10
CENTER SUPPORT – NO SPRAG TYPE	1958	F28B	1	A13
CENTER SUPPORT – SPRAG TYPE	1959-1965	F28C	1	A13
REAR PUMP – WASHER TYPE	1958-1960	F60C	1	A22
REAR PUMP – BEARING TYPE	1961-1965	F60D	1	A22
INPUT SHAFT	1958-1965	F25B	1	4
FRONT CLUTCH HUB	1958-1965	F59D	1	C11
FRONT CLUTCH PISTON	1958-1965	CALL	1	7
FRONT CLUTCH DRUM	1958-1965	F06D	1	C12
REAR CLUTCH PRESSURE PLATE	1958-1965	F44F	1	D1
REAR CLUTCH PISTON	1958-1965	CALL	1	15
REAR CLUTCH DRUM	1958-1965	F05B	1	16
SUN GEAR SHAFT – WASHER TYPE	1958-1965	F20E	1	17
SUN GEAR SHAFT – BEARING TYPE	1958-1965	F20F	1	17
PLANETARY – NO SPRAG/WASHER TYPE	1958	F11I	1	18
PLANETARY – NO SPRAG/BEARING TYPE	1958	F11P	1	18
PLANETARY – SPRAG TYPE/WASHER STYLE	1959-1965	F11J	1	18
PLANETARY – SPRAG TYPE/BEARING STYLE	1959-1965	F11K	1	18
REAR RING GEAR	1958-1965	F14G	1	F10
REAR RING GEAR	1958-1965	F14H	1	F10
OUTPUT SHAFT	1958-1965	CALL	1	19
GOVERNOR	1958-1965	CALL	1	F8
EXTENSION HOUSING	1958-1965	CALL	1	21
FRONT SERVO ASSEMBLY	1958-1965	CALL	1	NI
REAR SERVO ASSEMBLY	1958-1965	CALL	1	9

VALVE BODY	1958-1965	CALL	1	NI
YOKE	1961-1965	F78A	1	NI
FILLER TUBE & STICK	1961-1965	F131	1	NI
TRANSMISSION PAN	1958-1960	F48D	1	3
TRANSMISSION PAN	1961-1965	F48E	1	3
DRIVEN SPEEDOMETER GEAR/HOUSING	1961-1965	F130	1	NI
TORQUE CONVERTER	1958-1961	F3	1	NI
TORQUE CONVERTER	1962-1965	F3X	1	NI